

All information in this brochure can also be applied in the moving of other stereo Hi Fi and Video components.



1611 Duke Street  
Alexandria, Virginia 22314-3482


Phone: (703) 683-7410  
Fax: (703) 683-7527 or  
(703) 548-1845

© Copyright American Moving and Storage Association



Before moving your CD Player there are certain procedures to follow which will protect your system from mechanical failure or damage due to normal physical shock which occurs during transport.

If the following tips are considered prior to moving, your CD Player should arrive safely at destination.

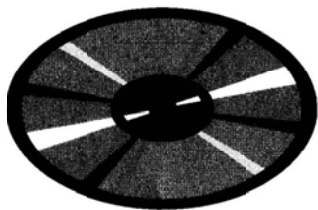

Remember to remove all CDs from your player before packing.

Failure to remove CDs before packing could result in scratches to your CDs and damage to the laser in your CD player


This would also be a good time to make sure that all of your CDs are back in their cases.

If you do not have the owner's manual, it may be wise to draw a diagram of the wiring configuration for future hook up.

Some CD Players come equipped with a "transport screw" usually located underneath the unit. Tighten this screw before packing, this will immobilize some of the inner parts. Refer to your owner's manual to determine the location of the "transport screw".

If your unit comes with a cartridge (stacker) for CD multiplay, be sure to remove the cartridge before packing. The cartridge can be wrapped and packed in the same box as the CD player. All CD trays whether single or multiplay should be in the closed position before packing.

## Practical tips for Moving with your CD PLAYER

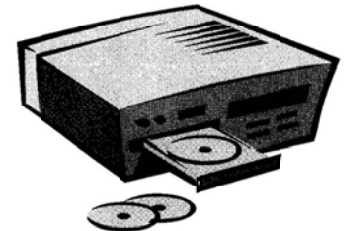

The best way to move your CD player is in the original box with the original packing. In the event that you do not have the original box or packing, use a box big enough to cover the entire unit with enough room for packing material. The packing material should snugly fill the excess room in the box so that the unit will not move around. Plastic bubble sheets make an ideal packing material. Try to stay away from using newspaper, this will not secure the unit as desired. Seal the box with reliable packing tape. In the event your original packing box is not available, your carrier will provide a sturdy packing container and materials.



If you have a remote control, be sure to pack this in the same box as your player. All wiring used with the CD player should also be packed in the same box.